

Anyload EB300 Calibration Method

1. Switch on the indicator. Press the PLU key long (for about 2s), the LCD displays PASS; press ENTER key, and input password (505388). The number could be selected by press UP or DOWN arrow key. Confirm the password by pressing ENTER key. Press RIGHT or LEFT arrow key to find rESEt, choose "1" by pressing UP key, and press ENTER to confirm.
2. Press the PLU key long (for about 2s), the LCD displays PASS; input the password.

2.1.Set Units

- 2.2.Press RIGHT arrow until the LCD displays Si.CAL; press ENTER, the LCD displays Si-01 (don't touch the platform in the procedure), press ENTER, the LCD displays 000000, place the weights on the platform, manually change the 000000 to the real value, and press ENTER again, the LCD displays Si-02; press LEFT key to escape to Si. CAL. Press LEFT or RIGHT arrow key until the LCD displays QUIT; press ENTER to save settings and return to normal operation."

Calibration is done.

Note:

1. The above is one-point calibration. If you need more-point calibration, continue the procedure when LCD displays Si-02 until all the points are calibrated.
2. If the indicator will be connected to two platforms, the same calibration needs to be done for the second platform connection.