

ANYLOAD[®]

815 SERIES

LED INDUSTRIAL WEIGHING
INDICATOR



GRAVITY COMPENSATION SET UP MANUAL

HOW TO SET UP (ON AN ANYLOAD INDICATOR):

Power on the device by ensuring it is properly connected to a power source and pressing the power button.

To enter the setup menu, press and hold the Zero and Tare buttons simultaneously. When prompted to enter the password, use the navigation buttons to input the default password, 0001, and press Enter to confirm.

Use the navigation buttons to scroll through the menu options and locate F3.0. Select F3.0 and set it to SET using the navigation buttons, then press Enter to confirm the selection. Navigate to the gravitational force setting and use the left and right navigation buttons to move the cursor between digits. Use the up and down navigation buttons to modify the digit value.

After entering the correct gravitational force, press Enter to set the value. To save the settings, press the Zero and Tare buttons simultaneously. This completes the process of setting the gravitational force on your device.

STEP BY STEP GUIDE

Step 1



Power ON the device by ensuring it is properly connected to a power source and pressing the power button.

Step 2



Enter the setup menu by pressing and holding the Zero and Tare buttons simultaneously.

Step 3



When prompted, enter the password by using the navigation buttons to input the default password, 0001, and press Tare to confirm

Step 4



Use the navigation buttons to scroll through the menu options and locate F3.0

Step 5



Select F3.0 and set it to SET using the navigation buttons, then press Tare to confirm the selection.

Step 6



Navigate to the gravitational force setting and use the left and right navigation buttons to move the cursor between digits.

Step 7



Modify the digit value using the up and down navigation buttons.

Step 8



After entering the correct gravitational force, press Tare to set the value.

Step 9



Save the settings by pressing the Zero and Tare buttons simultaneously.

Step 10

This completes the process of setting the gravitational force on your device.